

# VISICIALY © 202

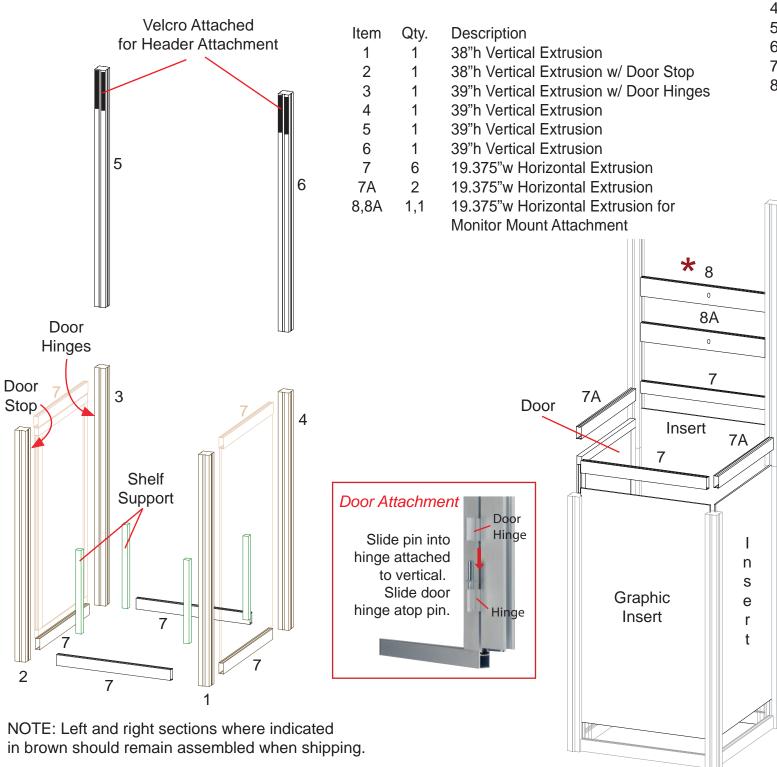

#### Steps:

- 1) Attach lower horizontal extrusions [7] between vertical extrusions [1, 2, 3 and 4].
- 2) Place inserts and attach door where indicated.
- 3) Attach horizontal extrusions [7] between vertical extrusions [1, 2, 3 and 4] and atop inserts and door.
- 4) Connect upper vertical extrusions to lower vertical extrusions [5 to 3 and 6 to 4].
- 5) Attach monitor mount attachment extrusion [8] between vertical extrusions [5 and 6].
- 6) Velcro internal shelf supports to inside of assembled base, then set internal shelf atop supports.
- 7) Place counter top atop assembled base.
- 8) Velcro header sign to top of vertical extrusions.

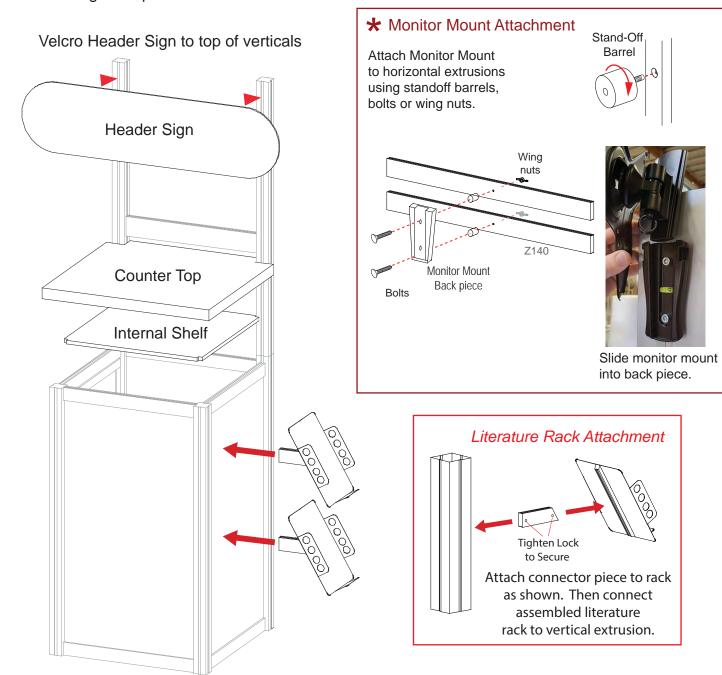

# SETUP INSTRUCTIONS



#### General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

### Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a MILD NON-ABRASIVE cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

#### Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.

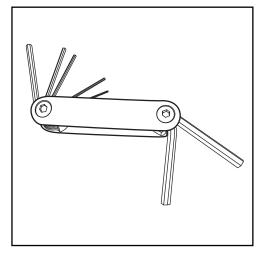

Hex Tool - Essential for Assembly

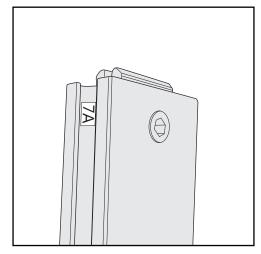


Part Identification - Numbering




DO NOT USE POWER TOOLS

WARNING

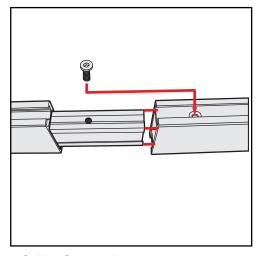


Spline Connection

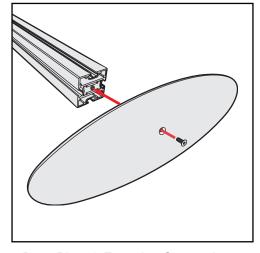


Base Plate & Extrusion Connection



LADDERS OR LIFTS MAY BE REQUIRED

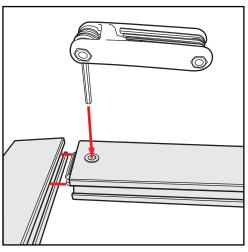

**Extrusion & Lock Connection** 

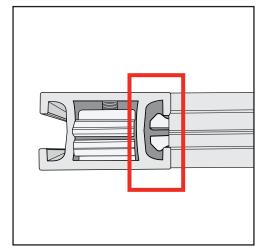

**Engaged Lock** 



**ALL CONNECTIONS MUST** BE TIGHTLY SECURED





# Top View of Each Level

