
#### Order #XXXXX MOD-1335 iPad Kiosk

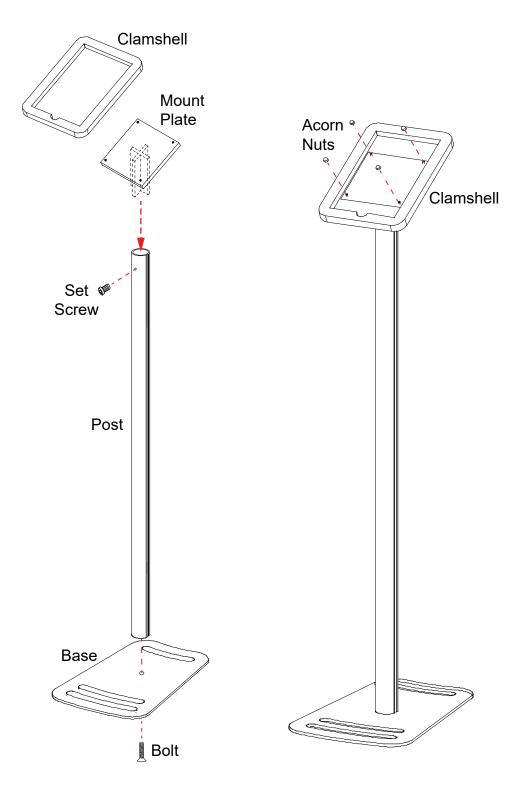


#### Steps:


- 1) Attach base to post, using bolt.
- 2) Attach mount plate to post, using set screw.

  NOTE: Mount plate must rotate left and right, before installing clamshell.
- 3) Attach clamshell to mount plate, using acorn nuts.
- 4) Insert iPad into clamshell, then route cords through holes in post. See Cord Management For iPad detail.



easily removed.

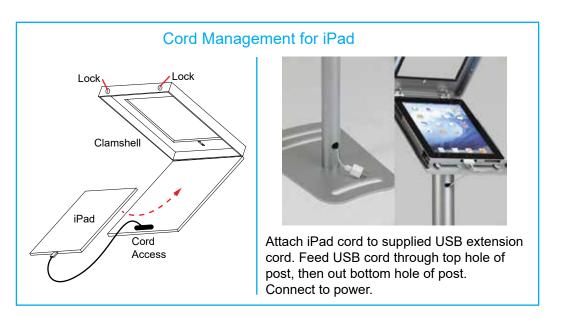

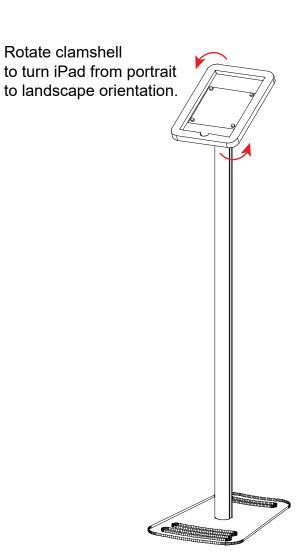

Completed Assembly

# SETUP INSTRUCTIONS



### General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

## Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a MILD NON-ABRASIVE cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

### Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.

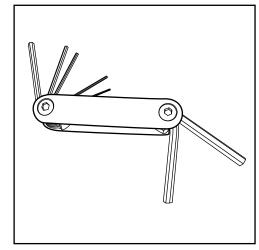

Hex Tool - Essential for Assembly

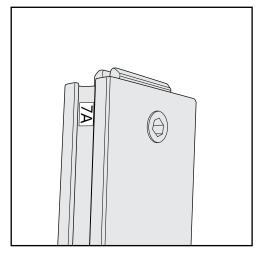


Part Identification - Numbering




DO NOT USE POWER TOOLS

MARNING

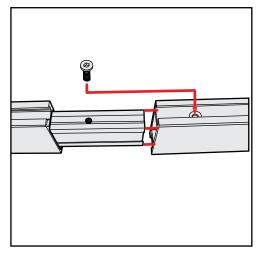


Spline Connection

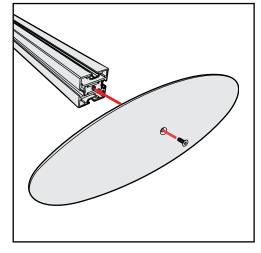


**Base Plate & Extrusion Connection** 



LADDERS OR LIFTS MAY BE REQUIRED

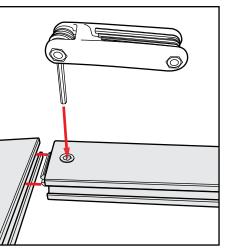

**Extrusion & Lock Connection** 

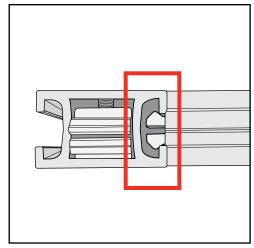

Engaged Lock



**ALL CONNECTIONS MUST BE TIGHTLY SECURED** 

